

Replacing paper feed module



Push button to open ADF door.

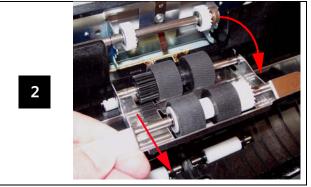

Remove roller from ADF door.

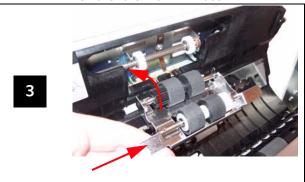

Insert new roller and rotate roller assembly up.

Indicator Lights and Error Codes

The color of the LED indicates scanner status:

LED	Status
Steady green	Ready to scan or scanning is in
	process.
Flashing green	Sleep mode.
Flashing green/	Multifeed Ignore function is set.
orange	
Steady orange	The rollers need to be cleaned or
	replaced. Scanning can continue.
Flashing	Initializing or Sleep mode with
orange	warning. Check the status of the
	scanner using the User Utility.
Red	An error occurred. Check the status of
	the scanner using the User Utility.

Supplies and Accessories

CAT No.	Description
853 5981	Roller Cleaning Pads
896 5519	Staticide wipes
846 0321	Roller Exchange Kit
153 5376	Shading Paper
179 7158	Blower Brush
145 2812	Replacement Packaging
124 4847	Memory Upgrade Kit - Accessory
896 1955	Imprinter Kit - Accessory
155 8667	Printer Kit Cartridge
109 2436	Long Document Paper Weight Kit -
	Accessory

EASTMAN KODAK COMPANY 343 State Street Rochester, New York 14650 U.S.A. A-61691 / Part #7J3601 July, 2010 © Eastman Kodak Company, 2010 TM: Kodak



Trūper Series Scanners





Reference Guide

Kodak Service & Support

www.kodak.com/go/disupport

1.800.822.1414

(US&C only; all other regions, contact your local Kodak Support Center)


When contacting support, have the following available:

- A description of your problem
- Scanner model and serial number
- Computer configuration
- · Software application you are using

Cleaning rollers in the ADF/Exit area



Press button to open ADF door; push lever up to open exit door.

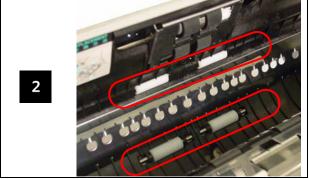


Clean all rollers in ADF area.




Clean all rollers in exit area.

Cleaning imaging guides

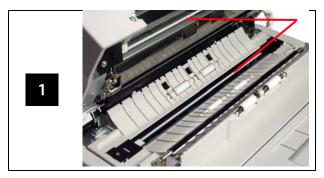

Clean the imaging guides with a Staticide wipe.

Cleaning the sensors

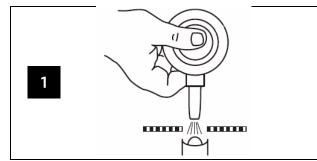

Use blower brush



Paper sensor, waiting sensor and double feed detector



Ending sensor, skew sensors and starting sensor.